



RollerBeatz



Introduction:

Thank you for purchasing this Merlin Product. Please read the instruction manual carefully before using the product.

The documentation provided will allow you to fully enjoy all the features this unit has to offer.

Please save this manual for future reference.

Instructions:

RollerBeatz is a high power portable speaker with wireless microphone. It also has trolley with wheels system for easy transport purposes. To complete the system it comes with a remote control, wired and wireless microphone. It features individual volume, bass, Treble and Echo controls and has the following inputs:

- Bluetooth
- Micro and SD Card slot.
- USB for flash drives.
- Stereo RCA line input.
- Separate Mic and Line input.

Charging:

- Before using the Rollerbeatz for portable usage please charge it via the DC port at the back of the unit. Only use the supplied 15V power supply for charging with this product.
- When the unit is switched on the blue "power" LED will be on.
- A charge indicator is located at the back of the Rollerbeatz. The green LED will light up when its connected to the power supply and charging.
- When fully charged the red "Full" LED will light up.
- There is a red "Low" LED that will light up to indicate the battery needs charging.

Bluetooth Mode:

Pairing:

- Switch on the unit using "Power" button at the back.
- After unit is on press the source button on the front of the unit to enter Bluetooth mode. The display will show "Blue".
- Open the Bluetooth function on the mobile phone and search for "BT Speaker". Select this item to pair with the Rollerbeatz.

Using the built in MP3 – Player:

In order to use this function please insert a USB or SD Card into the slot.

- Input Button: Use this button to change inputs to USB or Card. Press and hold button to switch voice prompts on/off.
- Play/Pause: Press to start playback or to Pause music during playback.
- Previous: Short press to go back to previous song. Long

press to search backwards in a song.

- Next: Short press to skip to next song. Long press to search forwards in a song.
- Stop: Stops all playback. It is recommended to press stop before removing SD Card or USB Drive.
- Repeat: Press once to repeat one song. Press twice to repeat all songs.
- Microphone Priority (Mic Pri): When this function is enabled the music will mute automatically when the microphone is used.
- Record: Press this button for 3 seconds to start recording of microphone audio. Press again to stop recording. The play button can be used to listen to the recorded audio.

Please note:

Ensure the USB/Card is formatted to FAT32 and files are in MP3 format only.

FM Mode:

The Rollerbeatz comes with an internal FM radio.

- Before listening to the radio please extend the antenna and select the 'FM' input.
- Play/Pause button: This button starts the autoscans function. The unit will automatically find and store stations in presets.
- Next: Scan forward frequency to search for station.
- Previous: Scan backward frequency to search for station.

Wireless Microphone:

- Before using the wireless microphone carefully remove battery cover and insert 2 x AA alkaline batteries.

Maintenance:

- 1) Retain these instructions for future use.
- 2) Clean the product with a damp cloth and mild soap.
- 3) Do not expose this product to rain or moisture.
- 4) Be careful not to turn or twist the cables used in this product too much as it can lead to malfunction and failure.
- 5) This product is not designed to be submerged in water and will malfunction if this occurs.
- 6) This product has no user serviceable items inside. Do not open this product as the user risk injury and would void the warranty.

FAQ:

Q) My SD Card / USB is not playing on the unit.

A) Please make sure it is formatted to FAT32 and the music is in MP3 format only.

Q) The wireless microphone is not working.

A) Please check the batteries have enough charge and green light is on when mic is used. This wireless mic has a maximum line of sight range of 30m.



LIMITED WARRANTY

Merlin Products are covered by a limited one-year warranty policy. If the product suffers from a manufacturing defect, the customer will receive a replacement if claimed within 15 days of the purchase date. Otherwise, the product will be inspected for possible repair options. The product will either be repaired and returned free of charge, or replaced. All repair services past the one-year warranty period will be charged for any repairs that need to be made.

If the client is located outside the UAE, or is otherwise unable to personally deliver the defective product to our service center or retail outlets, he/she may send it via post at his/her own cost. The repaired/replaced product will then be returned to the client via courier mail at Merlin's cost, as long as the warranty period is still active.

Important: This limited warranty DOES NOT COVER normal wear and tear, accidents, damage during transit, misuse, abuse or neglect. Attempting to disassemble the unit will render the warranty null and void.

REGISTER NOW


We hope you enjoy the quality of Merlin Digital product. Please take out a few minutes to register your product at merlin-digital.com/register to avail:

- Special discounts and promotions on other Merlin products
- Exclusive information on new products and innovations
- Reminders about product firmware downloads, updates and upgrades
- Competitions and exciting giveaways

To learn more about Merlin products visit our site at: www-merlin-digital.com or like our Facebook page on [facebook.com/merlin.digital.gadgets](https://www.facebook.com/merlin.digital.gadgets)
For enquiries and information call our toll free number 800-MERLIN (Sat-Thu, 9 am - 6 pm)

Contact our support staff for troubleshooting and any other enquiries relating to your Merlin product by sending an email at support@merlin-digital.com and your issue will be resolved within 48 hours.

REGISTER for exclusive product releases and future prize drawings!

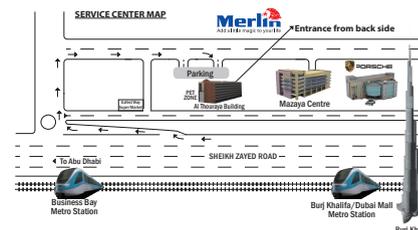

For a complete list of our worldwide locations, visit <http://merlin-digital.com/contacts>